

Flight Plans

DELETING a Numbered Flight Plan
DELETING a waypoint

DELETING Numbered Flight Plan

- 1 PRESS **FPL** to on the MFD
- 2 ROTATE Small FMS Knob to view Flight Plan Catalog (FPL2)
- 3 PRESS the FMS Knob to activate the cursor.
- 4 ROTATE Large FMS Knob to highlight the flight plan to be deleted.
- 5 PUSH **DELETE ▲** soft key. A dialogue box appears to ask if you really want to delete this numbered flight plan.
- 6 PUSH **ENT**. The screen returns to Flight Plan Catalog page (FPL2) showing the flight plan has been deleted.
- 7 PUSH **FPL** to return to the original page.

NOTE: if you decide to not delete the flight plan PUSH **CLR** instead of **ENT** in step #6 above.

DELETING a waypoint

- 1 PUSH **FPL**.
- 2 ROTATE Small FMS Knob to view Flight Plan Catalogue page (FPL2)
- 3 PUSH FMS Knob to activate cursor.
- 4 ROTATE Large FMD Knob to highlight the flight plan that contains the waypoint to be deleted.
- 5 PUSH **EDIT ▲** soft key.
- 6 ROTATE Large FMD Knob to highlight the waypoint to be deleted.
- 7 PUSH **CLR**. A dialogue box appears to ask if you really want to remove this waypoint.
- 8 PUSH **ENT**. The screen shows the flight plan with the waypoint deleted.
- 9 PUSH **FPL** to return to the original page.

NOTE: if you decide to not delete the waypoint PUSH **CLR** again instead of **ENT** in step #8 above.

NOTE: Deleting a waypoint from the Active Flight Plan will not change how the flight plan is stored. It is necessary to do to the Flight Plan Page (FPL2) to remove the waypoint from the stored flight plan.

Rev 12/24/2006