

# Flight Plans

Activating a Stored Flight Plan  
Activating a Stored Flight Plan in Reverse  
Alphabetizing the Stored Flight Plans

## ACTIVATING STORED

- 1 PRESS **FPL** to display the Active Flight Plan page. (FPL 1 on the MFD)
- 2 ROTATE Small FMS Knob to display the Flight Plan Catalog (FPL2)
- 3 PRESS the FMS Knob to activate the cursor.
- 4 ROTATE Large FMS Knob to highlight the desired flight plan.
- 5 PRESS ACTIVE **▲** soft key. (confirmation window appears with “OK” highlighted)
- 6 If correct, PRESS **ENT**. The screen returns to FPL1 Active Flight Plan page and the symbol connecting the first two waypoints appears. The **Desired Track** and **Distance** between waypoints is displayed. The bottom part of the page also shows Active Leg info which includes **Course** and **Enroute Safe Altitude** for the *leg*. **Flight Plan Info includes the Remaining Distance, Total Distance and Enroute Safe Altitude** for the *Flight Plan*.

**NOTE:** If you did not want to activate this flight plan, ROTATE Large FMS Knob to highlight “CANCEL” and PRESS **ENT**. The screen returns to the Flight Plan Catalog page (FPL2).

## ACTIVATING a Plan in REVERSE

In order to use a stored flight plan in reverse (inverted) it must first be chosen by using steps 1 through 4 above.

- 1 PRESS **INVERT ▲** soft key. The confirmation window with “OK” appears.
- 2 PRESS **ENT**. The screen returns to FPL1, Active Flight Plan page, with the waypoints reversed from its stored order.

**NOTE:** The stored flight plan remains stored in its original order.

## ALPHABETIZING Stored Flight Plans.

- 1 PRESS **FPL** from any page and ROTATE the Small FMS Knob 1 click clockwise.
- 2 PRESS **MENU**, ROTATE Large FMS Knob, select “**Sort by Comment**” and PRESS **ENT**.
- 3 PRESS **ENT** again to change the flight plan order.

